

STANDARD ARRIVAL CHART-INSTRUMENT

RJFF / FUKUOKA

STAR

LAGER ARRIVAL

From over LAGER, proceed via DGC R-337 to SANDY.
Cross LAGER at or above 3,000FT, cross SANDY at or above 2,000FT.

SANDY EAST ARRIVAL

From over EBISU, proceed via IKE R-073 to intercept and proceed via DGC R-337 to SANDY via LAGER.
Cross LAGER at or above 3,000FT, cross SANDY at or above 2,000FT.

SANDY WEST ARRIVAL

From over IKE VOR/DME (IK NDB), proceed via IKE R-073 (074DEG from IK NDB) to intercept and proceed via DGC R-337 to SANDY via LAGER.
Cross LAGER at or above 3,000FT, cross SANDY at or above 2,000FT.

