


AIRCRAFT PARKING  
CHART - ICAO

START 118.500  
TAXIING 121.700

NOVOSIBIRSK, RUSSIA

TOLMACHEVO

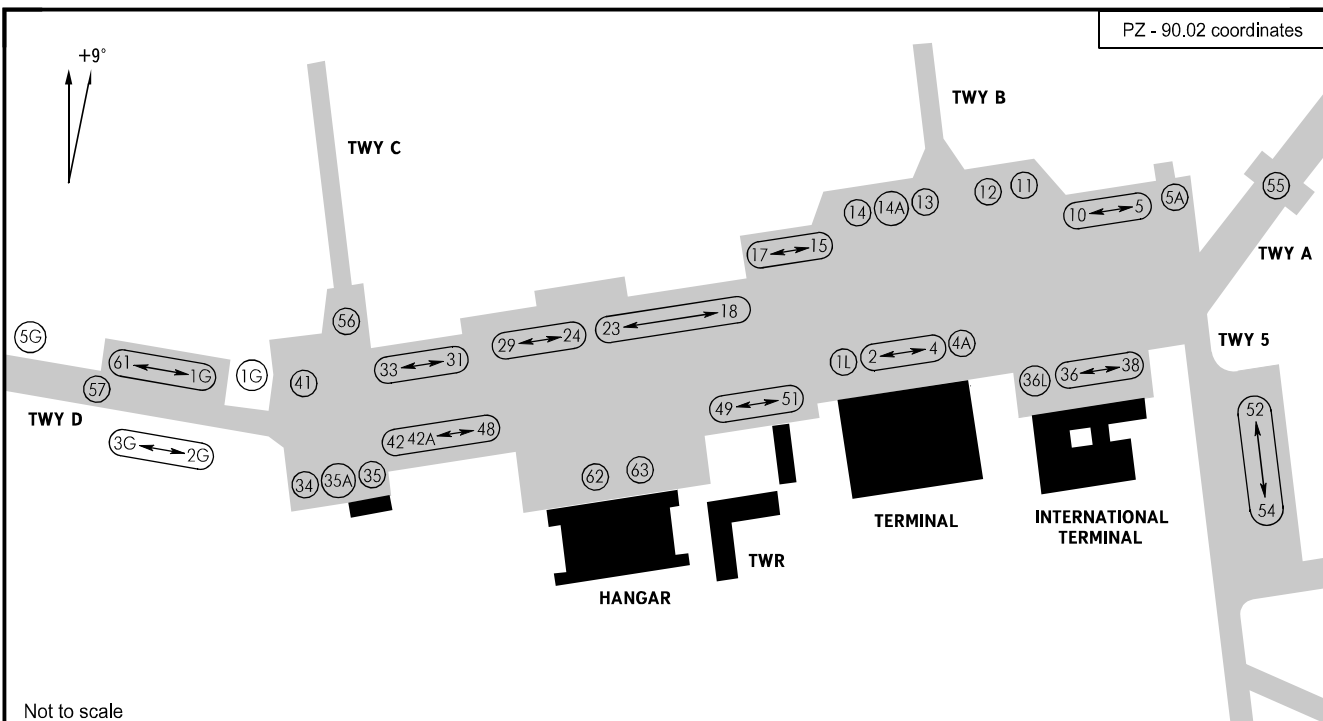

- STANDS:** 1-4 - PCN 52/R/C/X/T  
Strength: 5-17 - PCN 46/R/C/X/T  
18-29 - PCN 50/R/C/X/T  
30-32A - PCN 46/R/C/X/T  
34-38 - PCN 52/R/A/X/T  
42-51 - PCN 50/R/C/X/T  
56 - PCN 50/R/C/X/T  
58-61 - PCN 52/R/C/X/T

**WARNING:**

- Stands 34 and 35 are AVBL as reserve stands for one ACFT of An-124, B747 type.
- Parking of class below ACFT is allowed on all stands.
- Aerobridges are put into operation on ACFT stands 2, 3, 37. Taxiing into stands shall be carried out under own engines power according to marking.
- Stands 2 and 37 are AVBL for Tu-154, A-310, A-319, A-320, A-321, B727, B737 and smaller ACFT.
- Stands 58, 59A and 61 are AVBL for B747, B777, A-340, A-330, MD-11, IL-96, An-124. Taxiing into stands shall be carried out by towing. Taxiing out of stands shall be carried out under own engines power.

**ACFT types:**

- A-300  
A-310  
A-319, A-320  
A-321  
A-330, A-340  
A-380  
B727-200  
B737-200, B737-300, B737-400, B737-500, B737-600, B737-700  
B737-800, B737-900  
B747 (all modifications)  
B747-100, B747-200, B747-300, B747-400  
B747-100, B747-200, B747-300  
B747-SP  
B757  
B767  
B777  
An-2, An-24, An-26, An-28, An-140  
An-12  
An-22  
An-72  
An-124  
An-148  
An-225  
Il-62  
Il-76  
Il-86  
Il-96  
Tu-134  
Tu-154  
Tu-204  
Yak-40  
Yak-42  
SSJ-100  
DC-10  
MD-11  
ATR-42, CRJ-100, CRJ-200, Falcon  
ATR-72  
Gulfstream 5  
Gulfstream 4 and smaller

**STANDS:**

- 3, 5, 6, 8-10, 13, 14, 17, 24-26, 34-38, 41, 58, 59A, 61, 62  
1L, 2, 3, 5, 6, 8-10, 13, 14, 17, 24-26, 34-38, 41, 58, 59A, 61, 62  
1L, 2-4, 4A, 5-29, 34-38, 36L, 51, 58, 59A, 61-63  
1L, 2-4, 5-10, 13-17, 19-29, 34-38, 36L, 51, 58, 59A, 61-63  
1L, 5A, 14A, 35A, 56, 58, 59A, 61  
5A, 59A  
1L, 2-4, 5-10, 13-17, 19-29, 34-38, 41, 51, 62, 63  
1L, 2-29, 4A, 34-38, 36L, 41, 49-51, 62, 63  
1L, 2-17, 19-29, 34-38, 36L, 41, 51, 62, 63  
5A, 14A, 35A, 56, 58, 59A, 61  
5A, 14A, 36, 56, 58, 59A, 61  
1L, 5A, 14A, 35A, 36, 56, 58, 59A, 61  
1L, 5A, 14A, 58, 59A, 61  
1L, 2-10, 13-17, 19-29, 34-38, 41, 51, 62, 63  
1L, 3, 5, 6, 8-10, 13, 14, 17, 24-26, 34-36, 38, 41, 56, 58, 59A, 61, 62  
5A, 14A, 35A, 56, 58, 59A, 61  
11, 12, 18, 31-33, 42-48  
11, 12, 18, 42A, 58, 59A, 61  
35A, 56  
58, 59A, 61  
5A, 35A, 56, 58, 59A, 61  
11, 12, 18, 42-48  
5A, 59A  
1L, 3, 5-10, 13, 14, 17, 24-26, 34-36, 38, 41, 62  
5, 8-10, 14A, 34-36, 38, 41, 56, 58, 59A, 61, 62  
1L, 3, 5, 6, 8-10, 13, 14, 17, 24-26, 34-36, 38, 41, 56, 58, 59A, 61, 62  
1L, 5A, 6, 14A, 35A, 56, 58, 59A, 61  
1L, 2-29, 4A, 34-38, 36L, 41, 42A, 49-51, 63  
1L, 2-10, 13-17, 19-29, 34-38, 41, 51, 62, 63  
1L, 2-10, 13, 14, 17, 24-26, 34-38, 41, 62  
4A, 11, 12, 18, 31-33, 42-51  
4A, 11, 12, 18, 42A, 49-51  
4A, 11, 12, 18, 31, 32, 42-51  
1L, 5, 8-10, 14A, 34-36, 38, 56, 58, 59A, 61  
1L, 5, 10, 14A, 35A, 56, 58, 59A, 61  
4A, 11, 12, 18, 31-33, 42-51  
4A, 11, 12, 18, 31-33, 49-51  
4A, 11, 12, 18, 42-51  
4A, 11, 12, 18, 31-33, 42-51

STAND NR	LATITUDE	LONGITUDE
2	55 00 36.50N	082 40 00.29E
3-7T (Il-86)	55 00 36.65N	082 40 03.37E
3	55 00 36.78N	082 40 03.34E
5	55 00 41.27N	082 40 25.48E
10	55 00 39.99N	082 40 09.54E
11	55 00 40.87N	082 40 06.15E
12	55 00 40.59N	082 40 02.93E
13	55 00 39.44N	082 39 56.23E
14	55 00 38.74N	082 39 53.20E
15	55 00 38.11N	082 39 50.50E
16	55 00 37.71N	082 39 48.02E
17	55 00 37.46N	082 39 45.25E
36	55 00 36.14N	082 40 14.07E
37-8T (A-310)	55 00 36.51N	082 40 17.01E
37	55 00 36.41N	082 40 17.04E
55	55 00 44.31N	082 40 32.71E
56-4T1 (An-124)	55 00 37.43N	082 39 03.68E
56-6T2 (An-124)	55 00 34.97N	082 39 04.35E
56-5T (B747)	55 00 37.13N	082 39 03.53E
57	55 00 34.04N	082 38 39.53E
61	55 00 35.11N	082 38 42.75E

CHANGE: STANDS