


STANDARD DEPARTURE CHART  
INSTRUMENT (SID) - ICAO

TRANSITION  
HEIGHT : (1700)

GROZNY, RUSSIA  
SEVERNY  
RWY 08

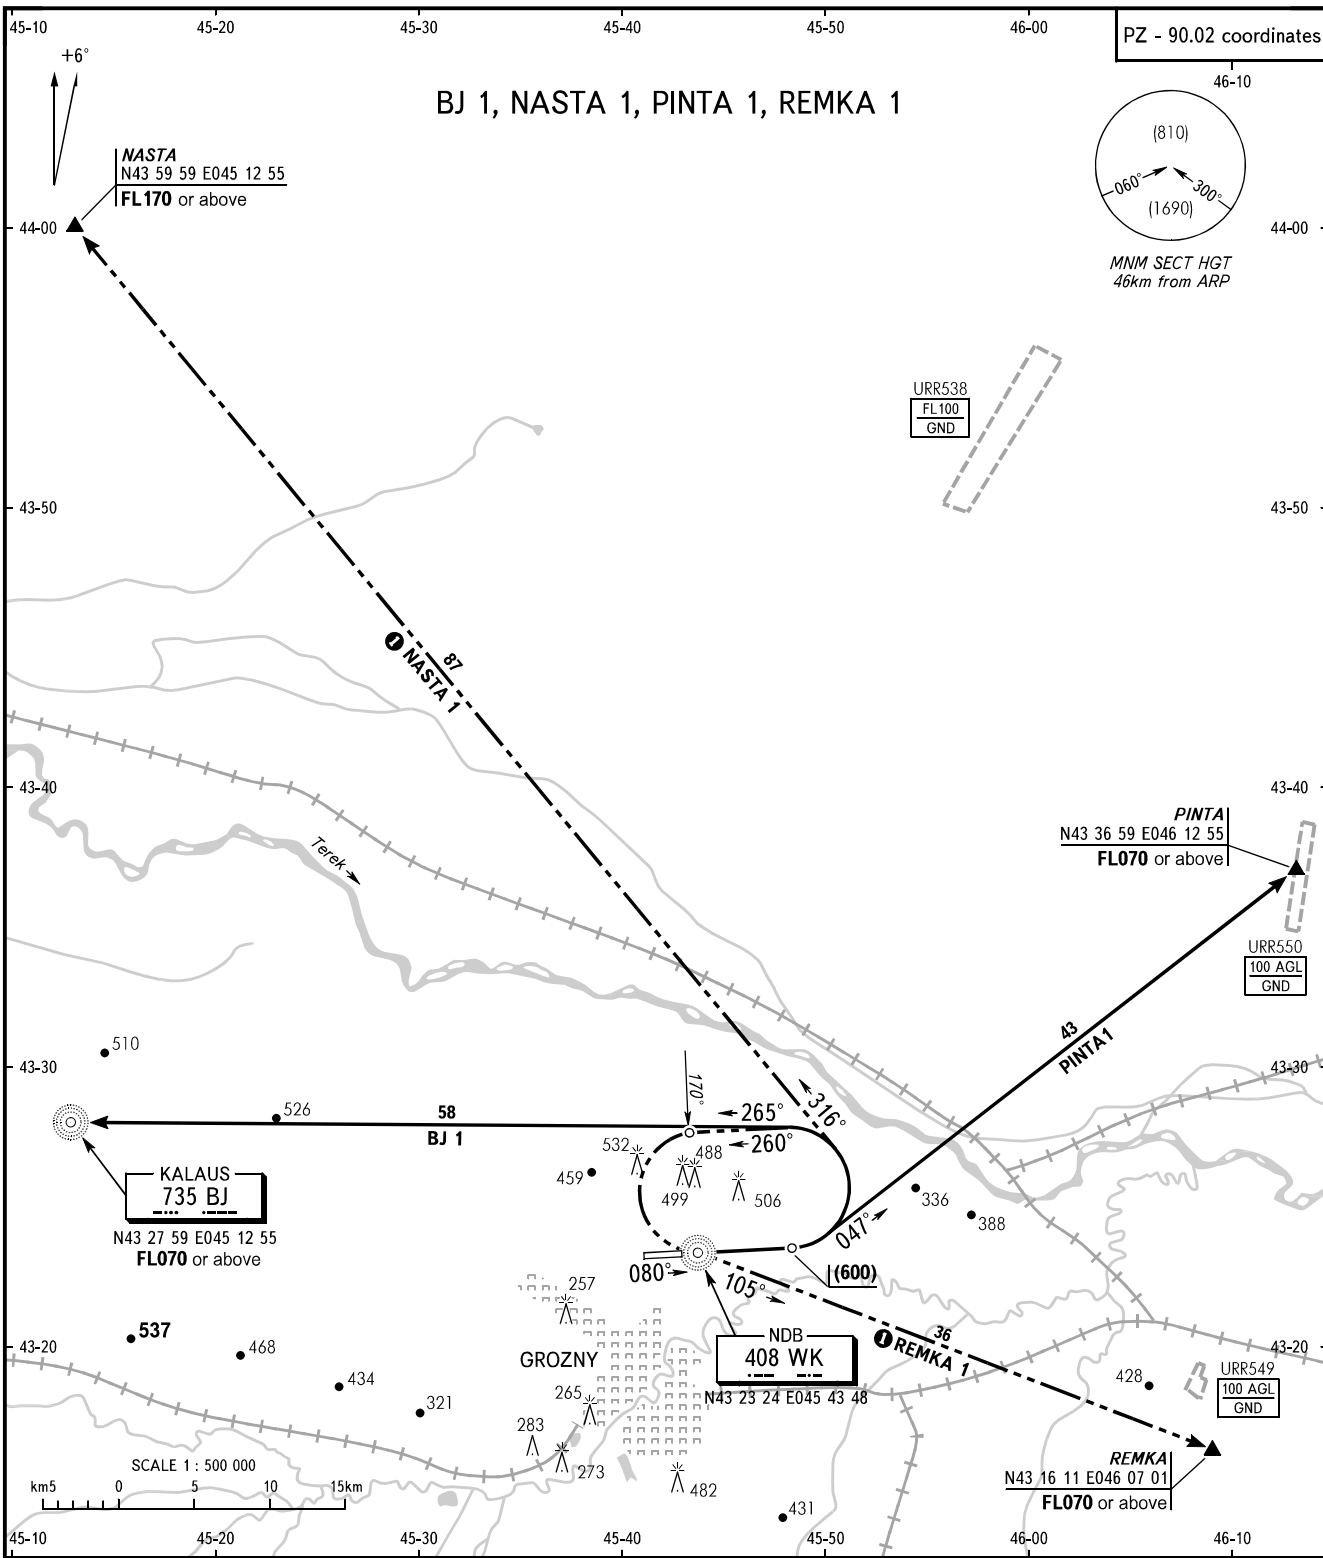

GROZNY KRUG (Additionally serves as  
LANDING, START) 120.2

**WARNING**

Flights are prohibited to the South of limiting bearing  
120° by ADF at distances 40-120km below FL130.

① Only for Russian users of airspace.

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES  
DISTANCES ARE IN KILOMETRES

CHANGE: FL, URR