



STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : **FL080**

GROZNY, RUSSIA
SEVERNY
RWY 08

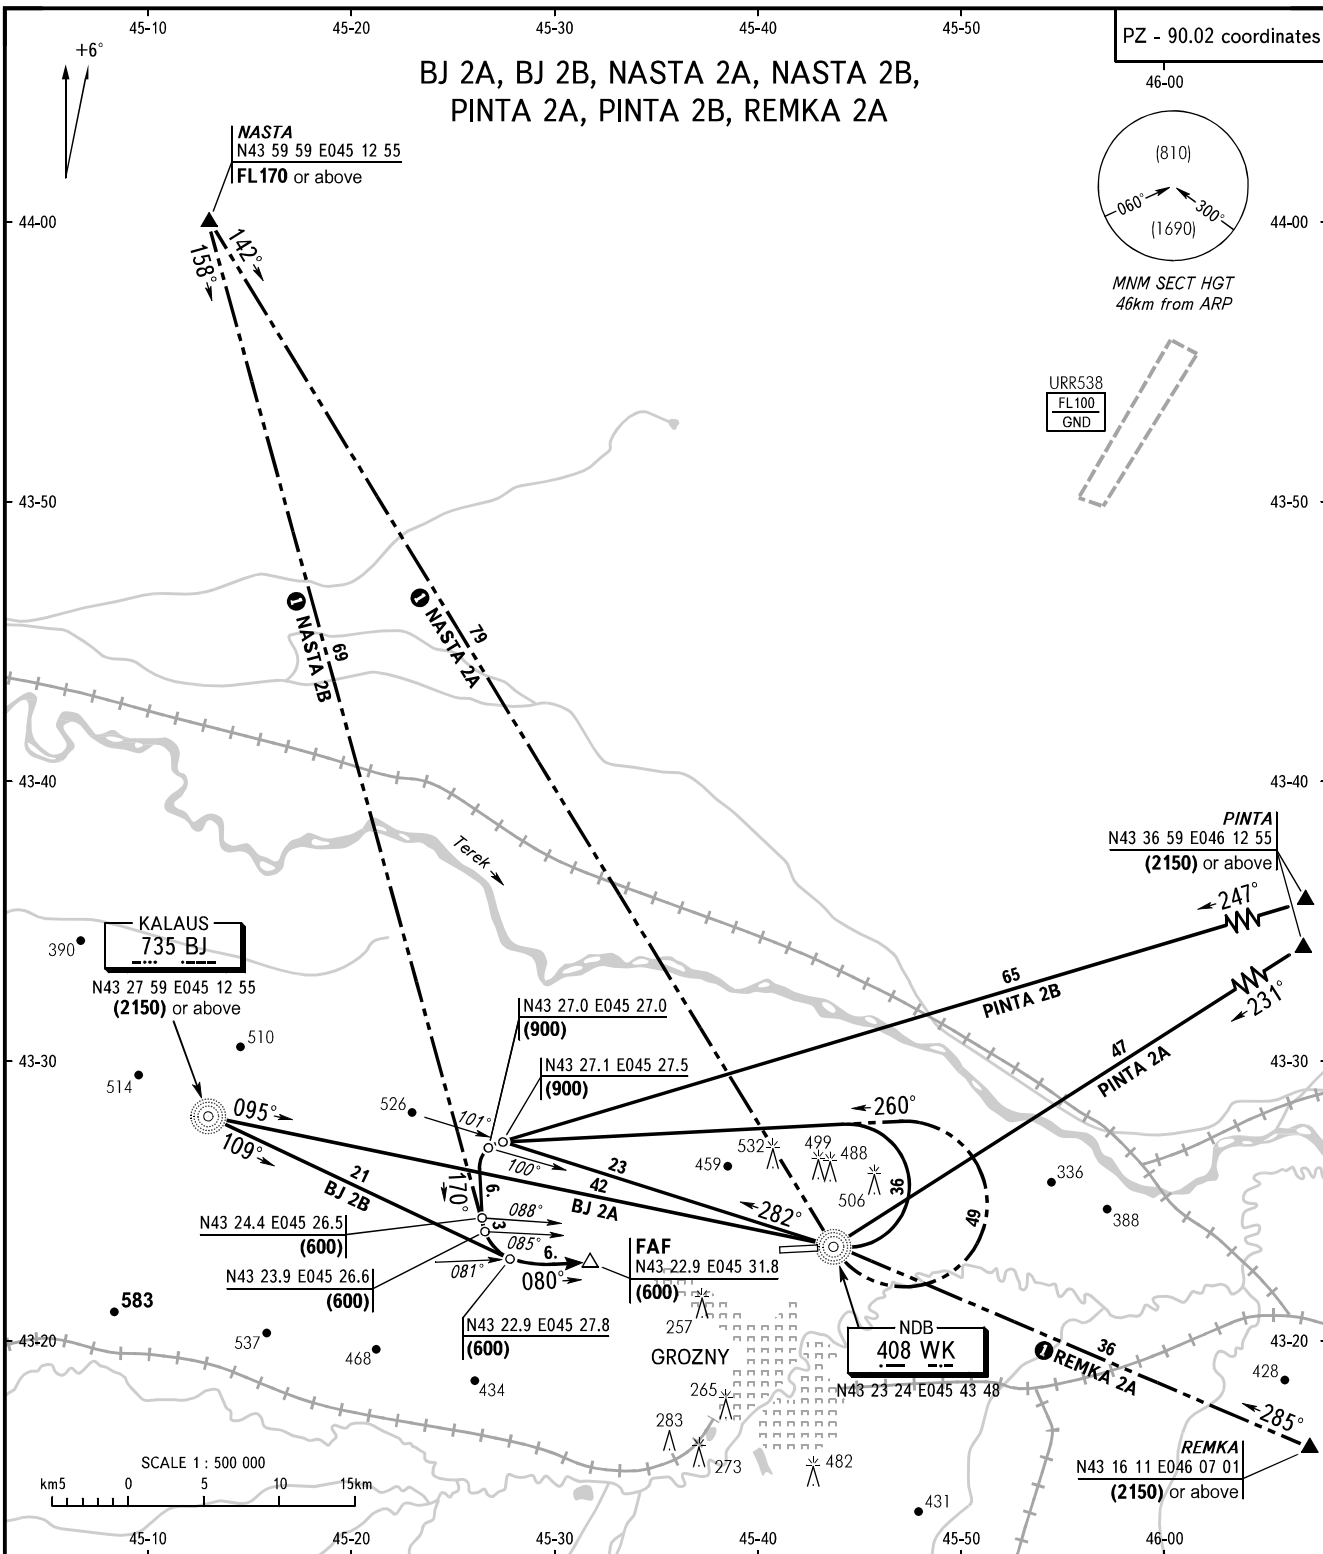

PZ - 90.02 coordinates

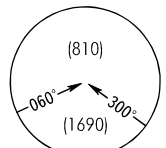

URR538
FL100
GND

GROZNY KRUG (Additionally serves as LANDING, START) **120.2**

WARNING
Flights are prohibited to the South of limiting bearing 120° by ADF at distances 40-120km below FL130.

① Only for Russian users of airspace.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: FL, UUR