


AERODROME GROUND MOVEMENT
AND AIRCRAFT PARKING CHART - ICAO

START 119.700
TAXIING 119.000

ROSTOV-NA-DONU, RUSSIA

ROSTOV-NA-DONU

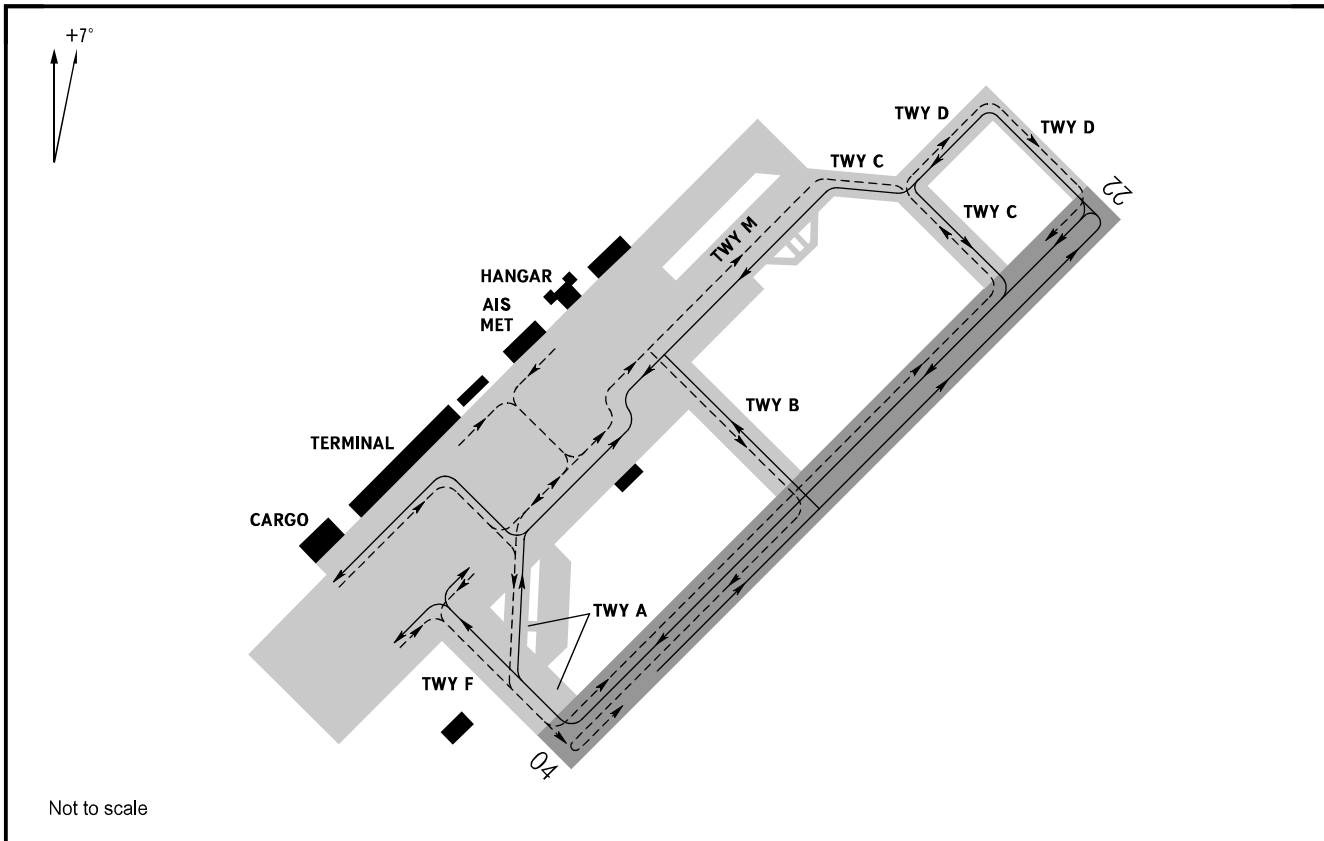

Not to scale

TAXIWAYS:

Width: A, F, M - 21m
B, C - 18m
D - 22.5m

Surface: A, B, C, D, F, M - Reinforced Concrete

Strength: A, C, D, F, M - PCN 33/R/C/W/T
B - PCN 32/R/C/X/T

WARNING:

- Stands in the western part of the apron are changed. Taxiing of ACFT into/out of the stands shall be carried out by controller's instructions or by visual signals of the marshaller.
- Air taxiing shall be carried out by permission of the ATC controller for HEL with the diameter of the main rotor of 11m or less. Air taxiing onto/from stands 41, 51 is allowed at height of up to 10m, when visibility is not less than 500m and cloud ceiling is not below 50m irrespective of the minimum of the HEL pilot-in-command.
- See AD 2.20 Taxiing Limitations.

TAXIING INTO/OUT OF STANDS

Stands	Taxiing in	Taxiing out
1-15, 40, 41, 60	Under engine power	
16-18	Towing	
19-28, 80-84	Towing	Under engine power
29-39, 44-49, 50, 51, 56-59	Under engine power via adjacent vacant stand	
50-55 on heading 310 DEG MAG	Under engine power	Towing
50-55 on heading 130 DEG MAG	Towing	Under engine power

CHANGE: WARNING