


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL: **FL050**

ROSTOV-NA-DONU, RUSSIA
ROSTOV-NA-DONU
RWY 22

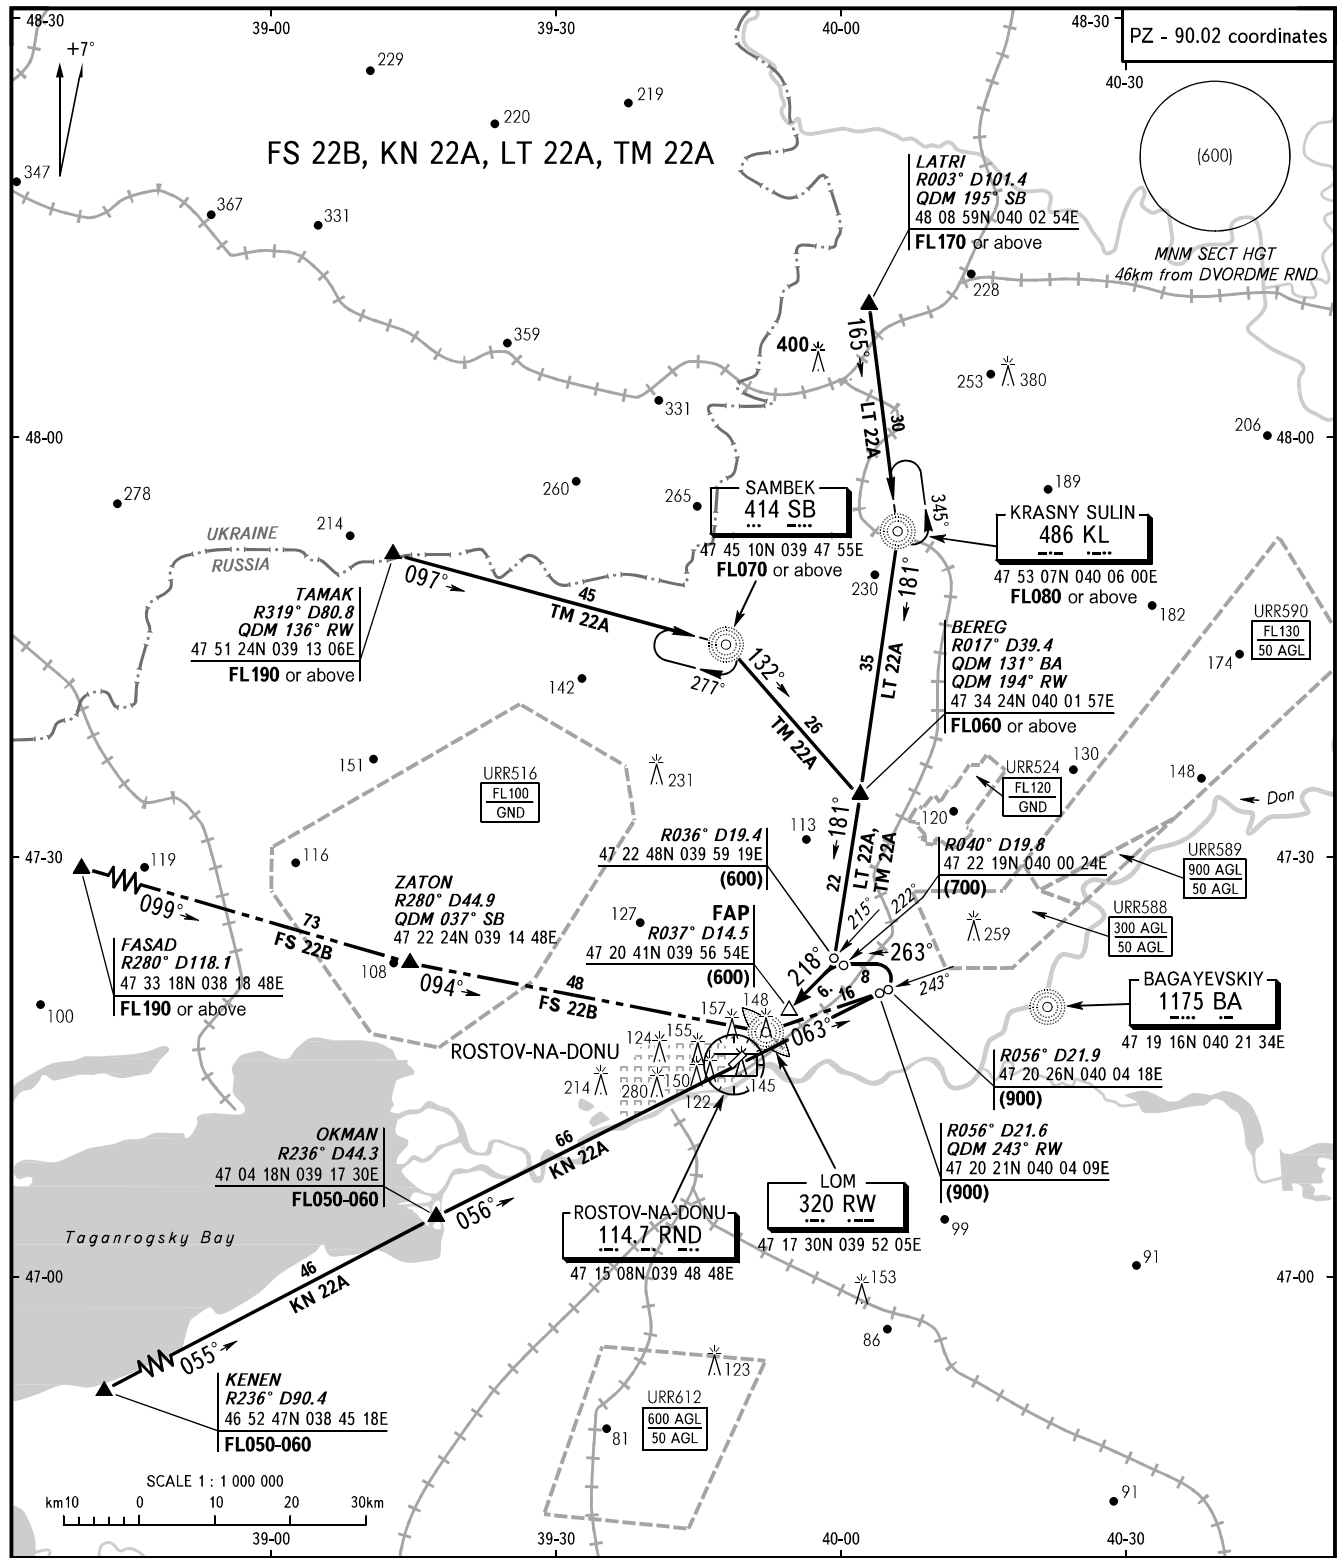

APPROACH	128.200	127.100R
RADAR	121.200	
START	119.700	

WARNING
Holding area over LOM RW, left-hand pattern, FL120-180.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: New chart