


STANDARD ARRIVAL CHART  
INSTRUMENT (STAR) - ICAO

TRANSITION  
LEVEL: **FL050**

**ROSTOV-NA-DONU, RUSSIA**  
ROSTOV-NA-DONU  
RWY 04

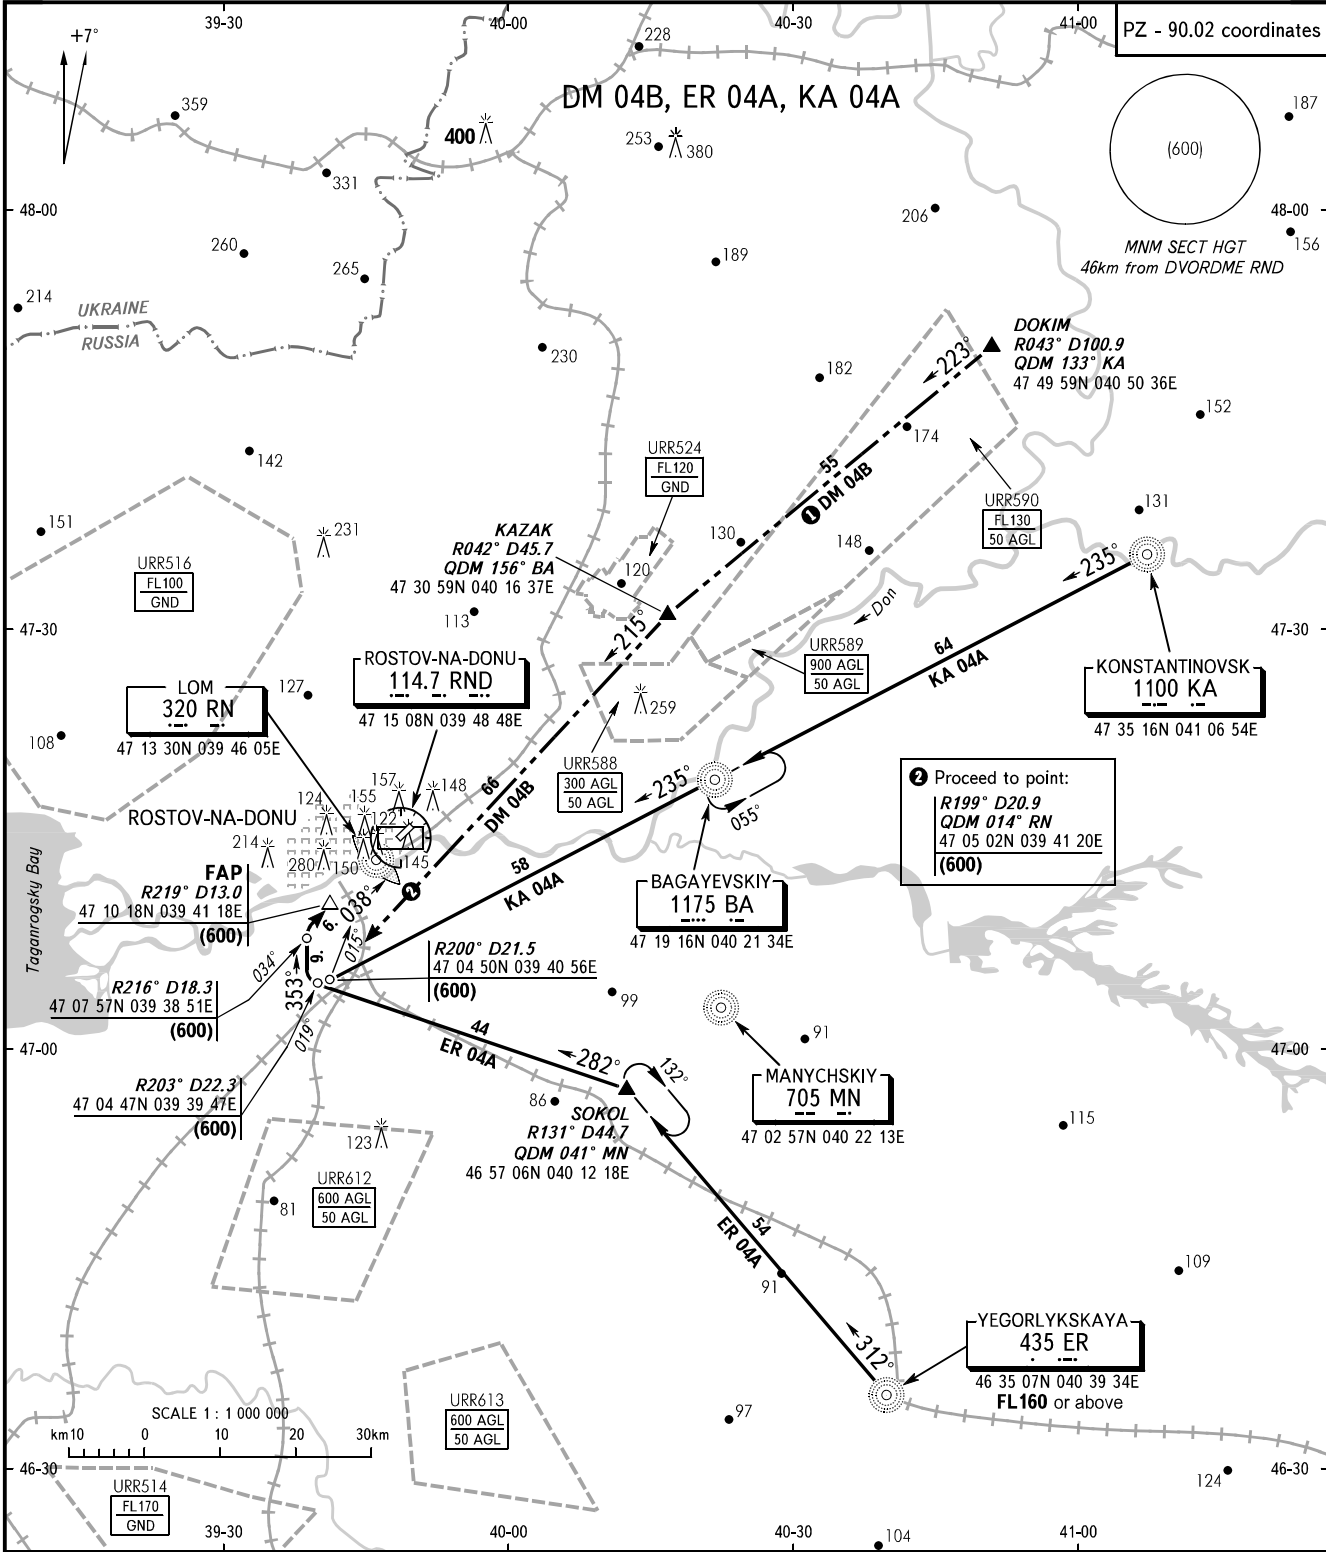

APPROACH **128.200**  
RADAR **121.200**  
START **119.700**

① Only for Russian users of airspace.

**WARNING**  
Holding area over LOM RN, right-hand pattern, FL050-180.

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES  
DISTANCES ARE IN KILOMETRES