


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : FL050

ROSTOV-NA-DONU, RUSSIA
ROSTOV-NA-DONU
RWY 22

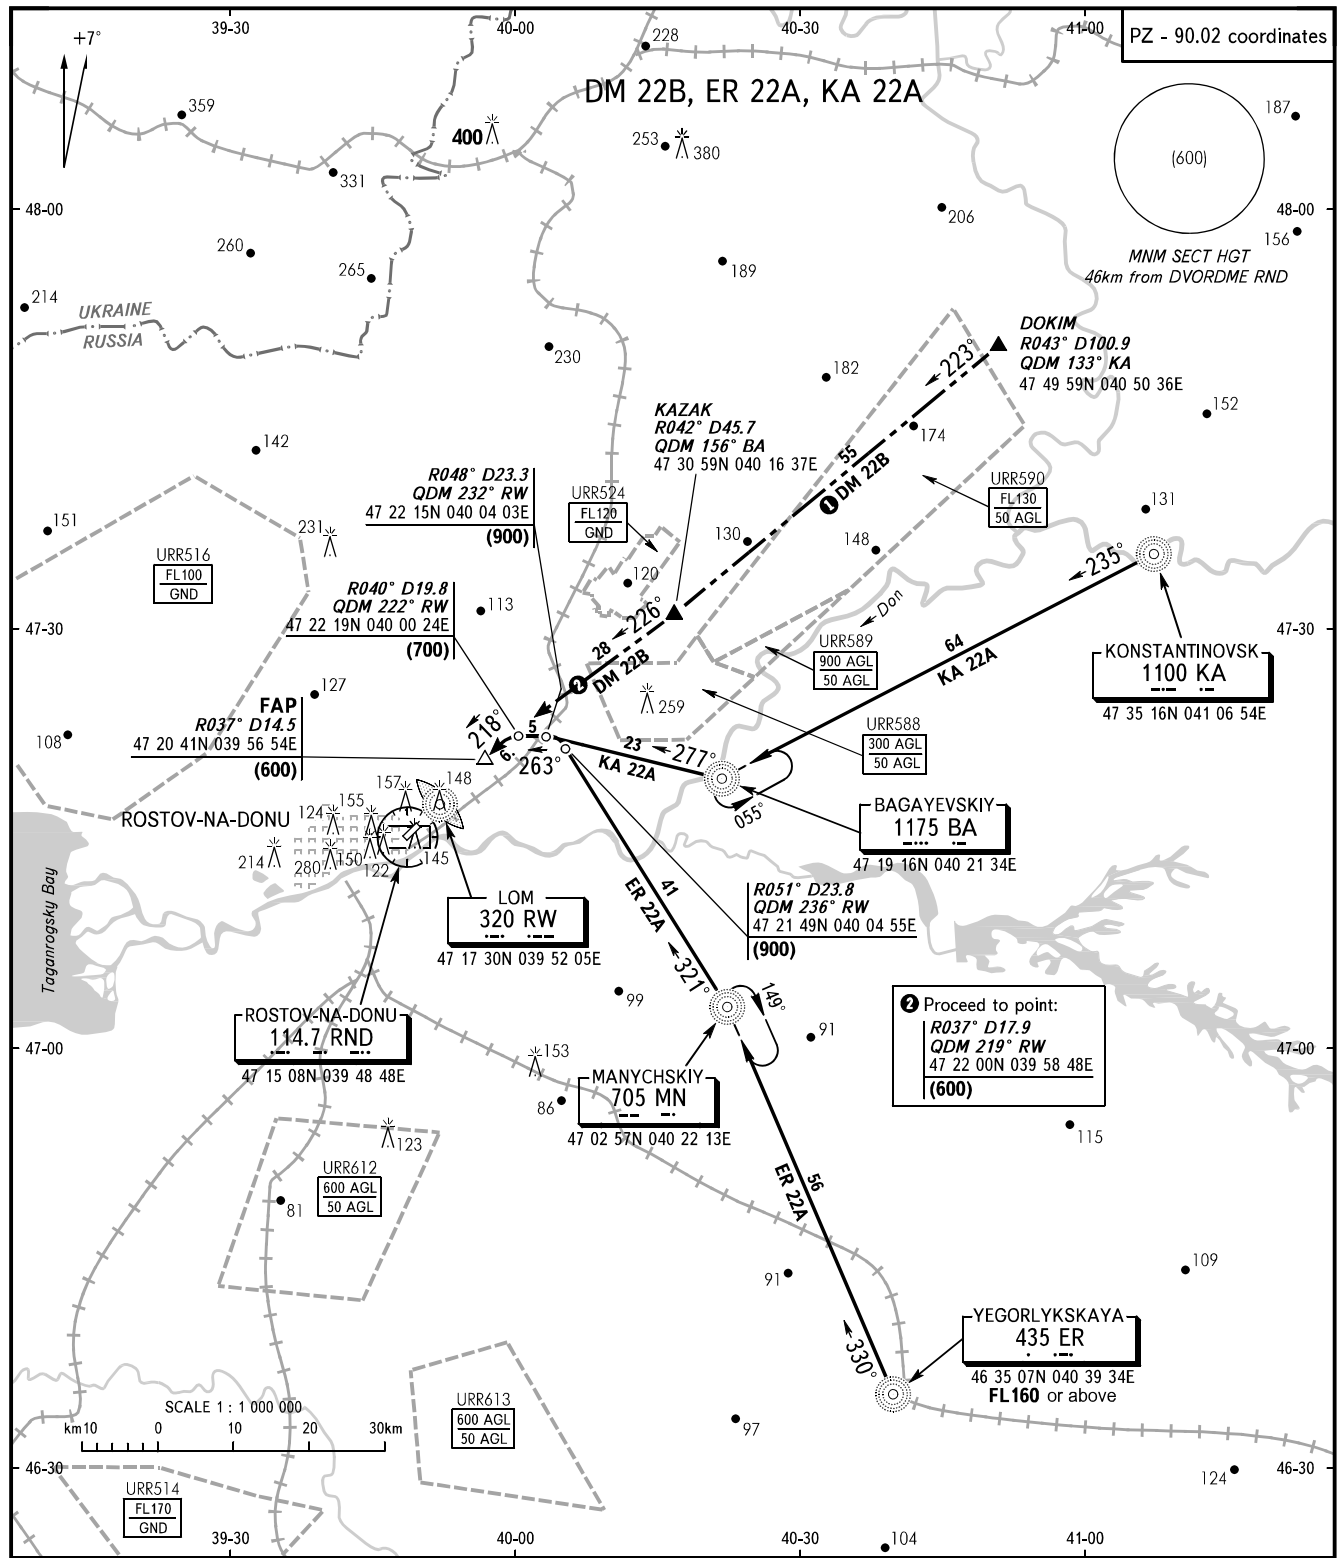

APPROACH 128.200
RADAR 121.200
START 119.700

① Only for Russian users of airspace.

WARNING
Holding area over LOM RW, left-hand pattern, FL120-180.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: HLDG BRG; QDM