


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : **FL050**

ROSTOV-NA-DONU, RUSSIA
ROSTOV-NA-DONU
RWY 04

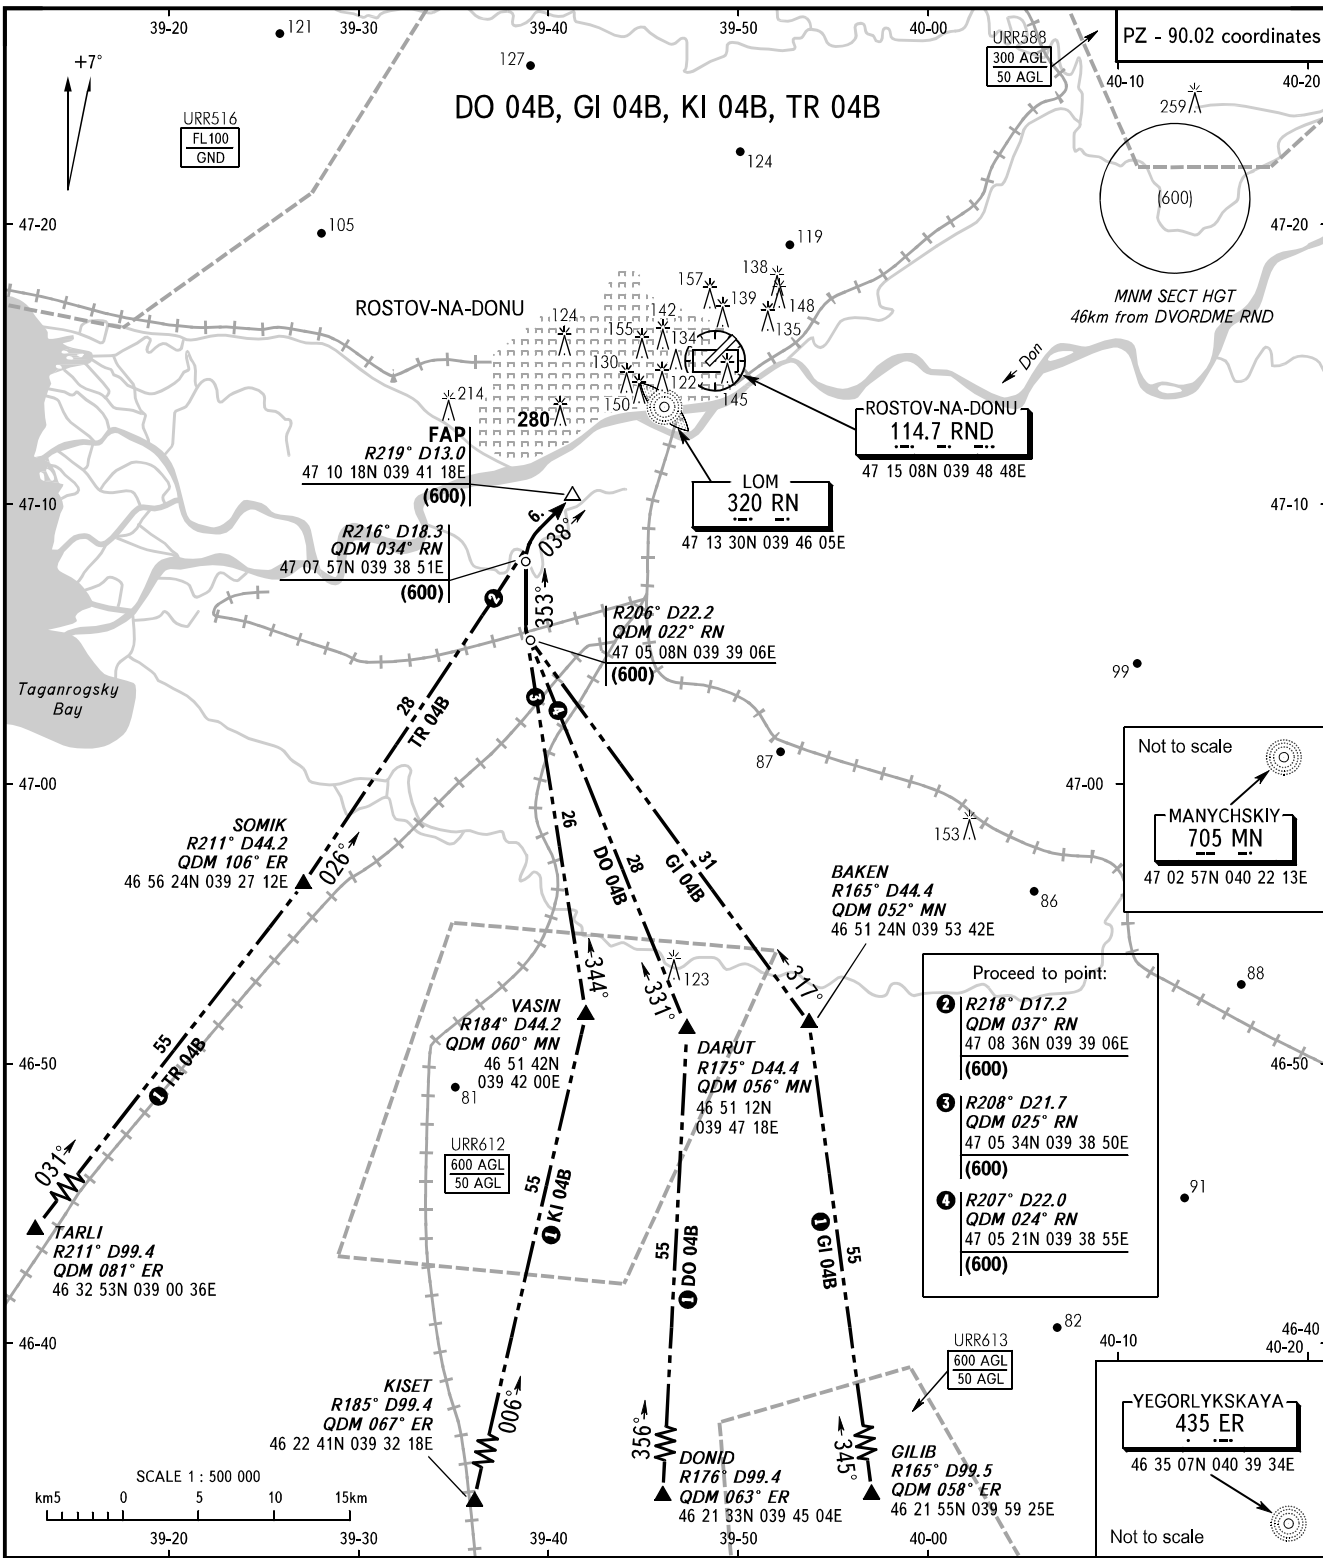

APPROACH **128.200**
RADAR **121.200**
START **119.700**

① Only for Russian users of airspace.

WARNING
Holding area over LOM RN, right-hand pattern, FL050-180.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: QDM 034° RN