


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL: **FL050**

ROSTOV-NA-DONU, RUSSIA
ROSTOV-NA-DONU
RWY 04/22

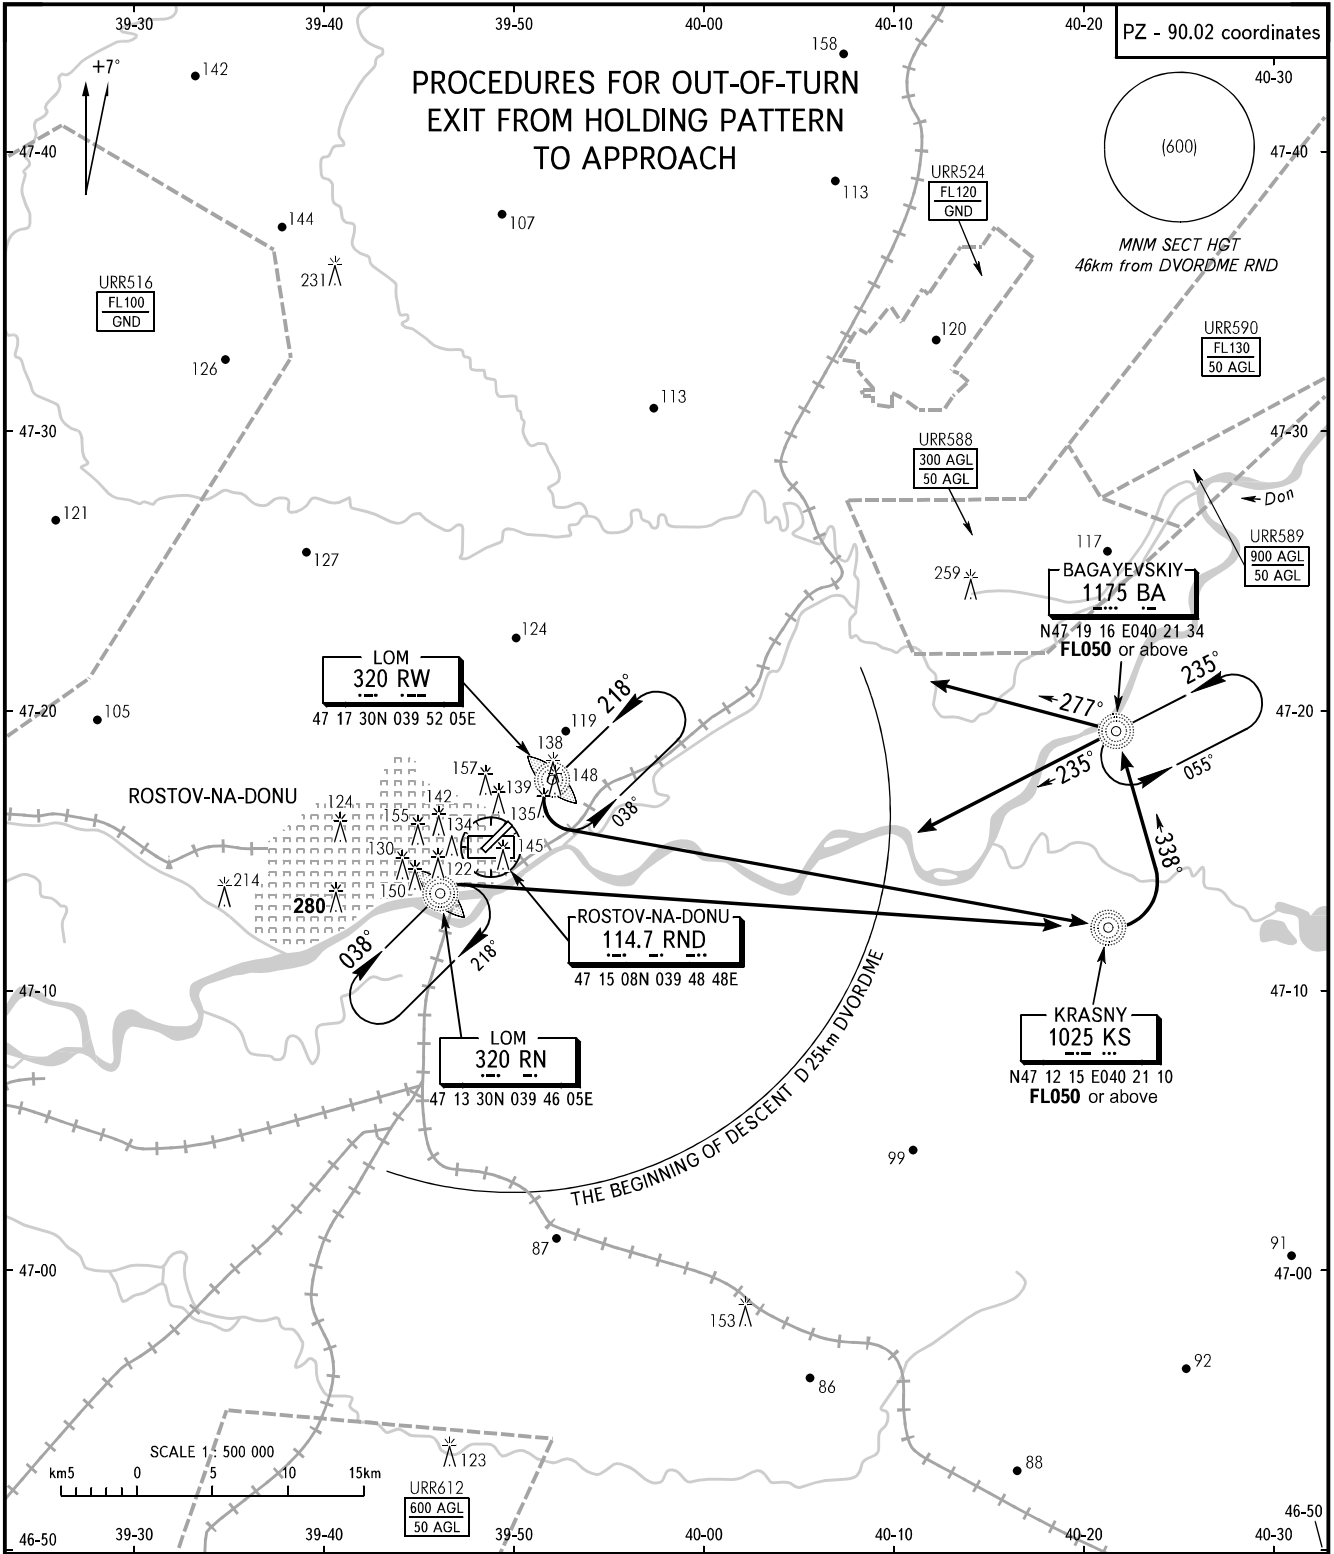

APPROACH **128.200**
RADAR **121.200**
START **119.700**

WARNING
Approach from BAGAYEVSKIY NDB shall be carried out in accordance with the established pattern.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: Chart name, COM