


AERODROME GROUND MOVEMENT
AND AIRCRAFT PARKING CHART - ICAO

SIVKAR START 124.600

SYKTYVKAR, RUSSIA

SYKTYVKAR

SK - 42 coordinates

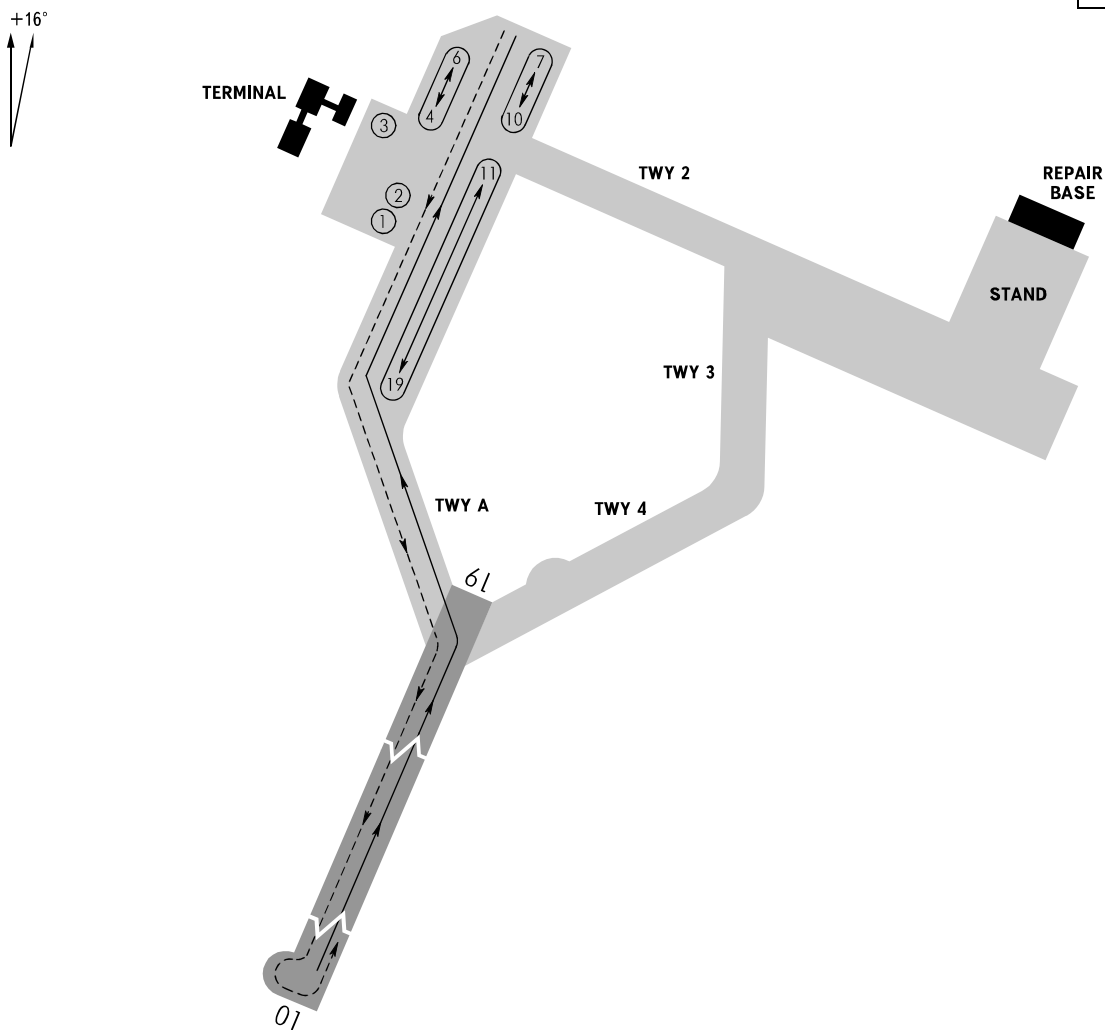

Not to scale

APRON:

Surface: Asphalt-Concrete

Strength:

Stands: 1, 2, 8-10 - PCN 28/R/B/X/T
3-6 - PCN 30/R/B/X/T
7, 11-18 - PCN 37/F/D/X/T
19 - PCN 47/F/D/X/T
Repair base - PCN 22/R/B/X/T

TAXIWAYS:

Width: A - 21m
2 - 16m
3 - 18m
4 - 30m

Surface: A, 2-4 - Asphalt-Concrete

Strength: A - PCN 51/F/D/X/T
2 - PCN 26/R/B/X/T
3 - PCN 17/F/D/Y/T
4 - PCN 17/F/D/Y/T

WARNING:

- Taxiing of Mi-2, Mi-8 HEL out of/into stands 15-18 is allowed via stand 19 according to the marking.
- TWY 2, 3, 4 are closed.
- TWY 2 is AVBL for ACFT towing only.

ACFT types:

A-319-100, A-320-200, Tu-154, Tu-154M, Yak-42
B737-300, B737-400
B737-500, EMB-120ER, ATR-42, CRJ-100, CRJ-200,
An-24, An-26, Il-114, Yak-40
Il-76T, Il-76TD, Tu-204 and its modifications, Tu-214
and its modifications, Il-18, An-12, Mi-26 HEL, B757-200
Tu-134
An-2
Mi-2 HEL
Mi-8 HEL

STANDS:

2, 19
2, 11, 12, 19
1-19
19
2-19
13, 14
15-18
16-18

STAND NR	LATITUDE	LONGITUDE
3	61 39.8N	050 51.1E
4	61 39.8N	050 51.2E