



INSTRUMENT APPROACH CHART

RJBB / KANSAI INTL

ILS or LOC RWY 24L CAT II

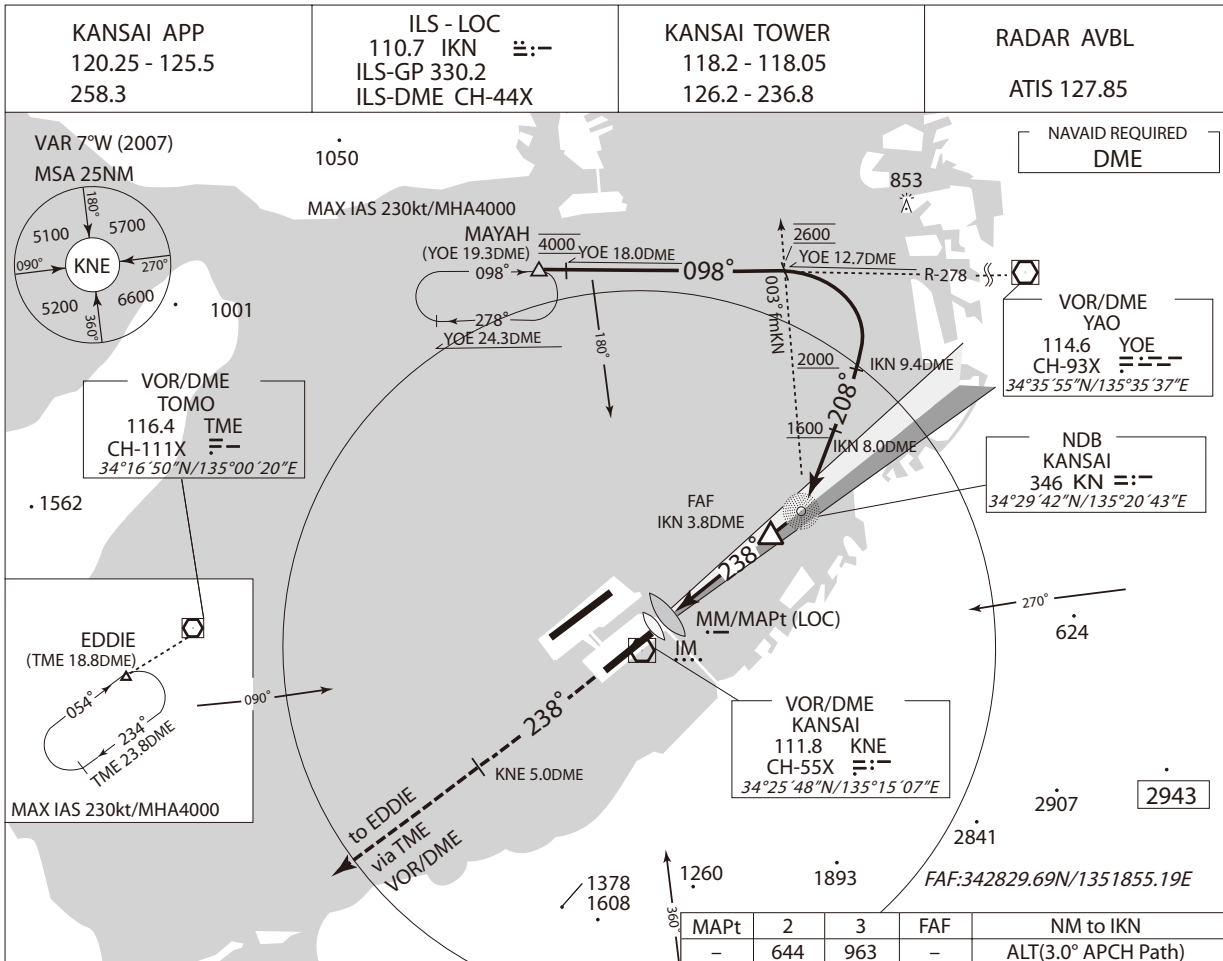

MISSED APPROACH
Climb to 4,000ft via RWY HDG to KNE 5.0DME, then proceed to TME VOR/DME via TME R-061, then TME R-234 to EDDIE and hold.
Contact KANSAI APP.

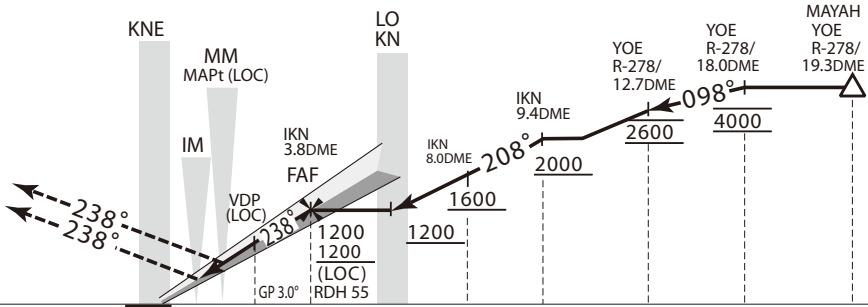

DME to IKN	0.3	0.7	1.3	3.8	5.7	
NM to RWY24L	0.0	0.1	0.5	1.1	3.6	5.5

MINIMA		THR elev. 16			AD elev. 17				
CAT	CAT II			CAT I		LOC		CIRCLING	
	DA(H)	RA	RVR	DA(H)	RVR/CMV	MDA(H)	RVR/CMV	MDA(H)	VIS
A	116 (100)	100	350	216 (200)	550	390 (373)	900	610 (593)	1600
B							1000		
C							1400		
D/DL									3200

Circling to North side of RWY only.
DH150(DA166)-RA150 for the operators on operational evaluation phases prior to CAT II operations.