
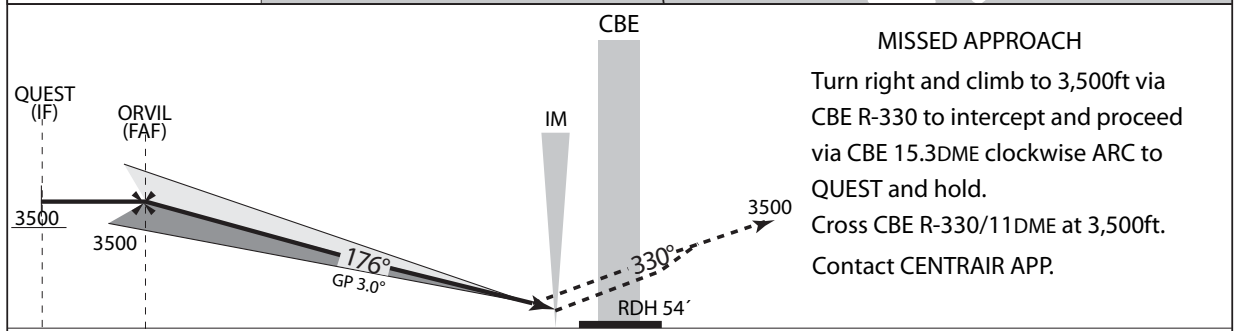


INSTRUMENT APPROACH CHART

RJGG / CHUBU CENTRAIR

ILS Z RWY18 CAT II

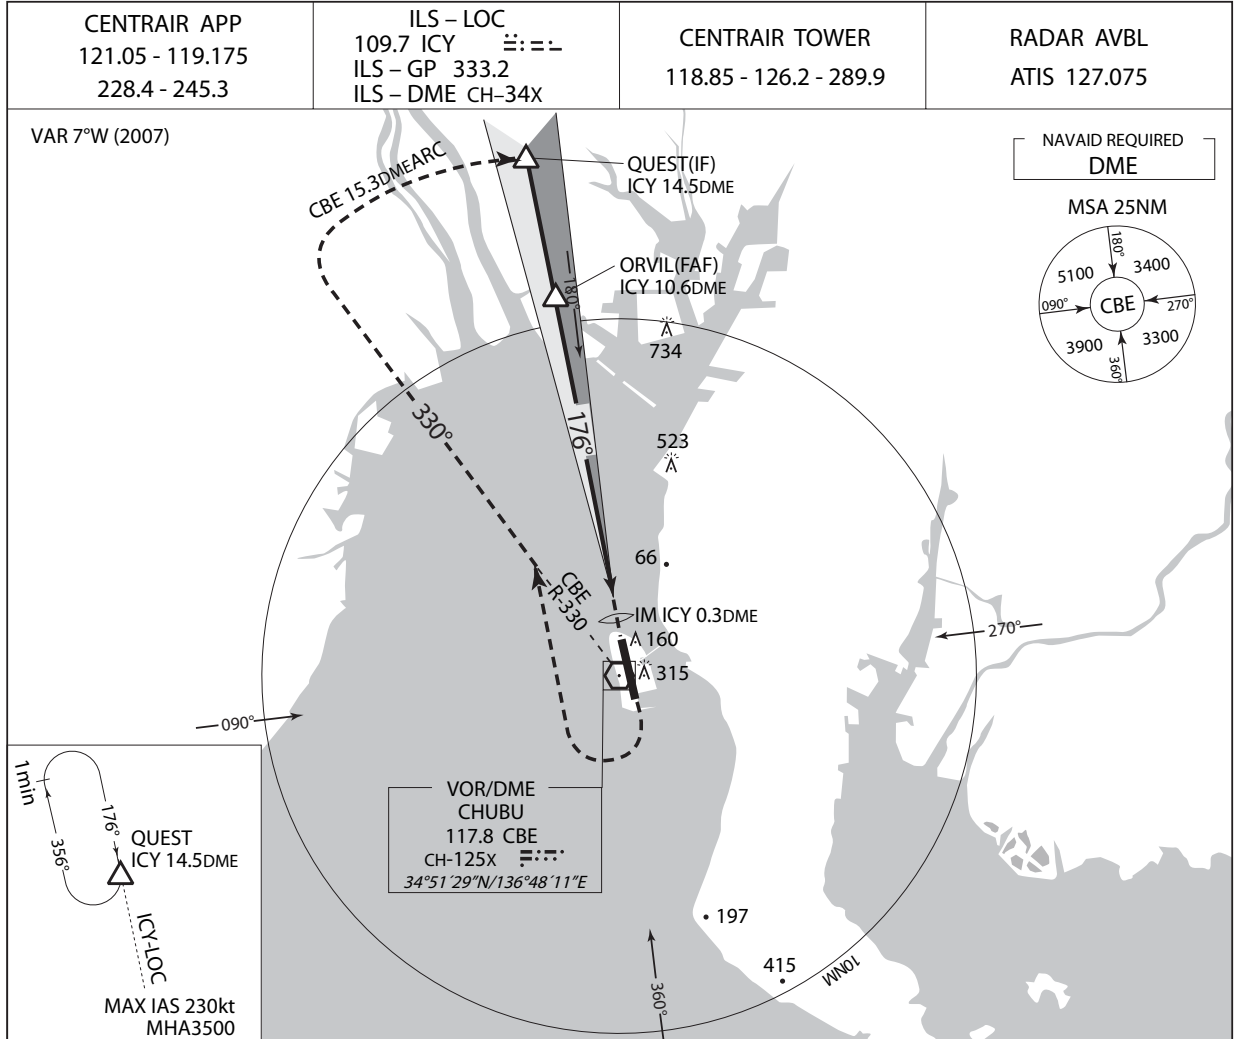

MISSED APPROACH
Turn right and climb to 3,500ft via CBE R-330 to intercept and proceed via CBE 15.3DME clockwise ARC to QUEST and hold.
Cross CBE R-330/11DME at 3,500ft.
Contact CENTRAIR APP.

14.5	10.6	0.3	DME to ICY
14.4	10.4	0.1	NM to RWY18

MINIMA				THR elev. 15		AD elev. 12		
CAT	CAT II			CAT I		CIRCLING		
	DA(H)	RA	RVR	DA(H)	RVR/CMV	MDA(H)	VIS	
A	115 (100)	100	350	215 (200)	550	520 (508)	1600	
B							2400	
C							3200	
D/DL							580 (568)	3200

Circling to west side of RWY only.
DH150(DA165)-RA150 for the operators on operational evaluation phases prior to CAT II operations.