


AIRCRAFT PARKING CHART-ICAO

ATIS 128.45
 D-ATIS 131.45 TWR(E) 118.1(118.85) GND(E) 121.65(121.85)
 DCL 131.45 TWR(W) 130.6(118.85) GND(W) 121.95(121.85) Delivery 121.7(121.85)

ZPPP KUNMING/Changshui

RWY	Direction	Apron bearing strength (PCN)
03/21	039° / 219°	Stands Nr.105-107,129,134-135,140,163-164,312-313,322-323, PCN 106/R/B/W/T 329,702,708-709,720-721:
		Stands Nr.101,103-104,108-110,112-116,126,128,130-133,136-139, PCN 85/R/B/W/T 141-142,153-162,165-167,311, 314,318,321,705-706,722-724:
04/22	039° / 219°	Stands Nr.102,111,117-125,127,143-152,168,315-317,324-328, PCN 75/R/B/W/T 701,703-704,707,710-719,722A,722B:

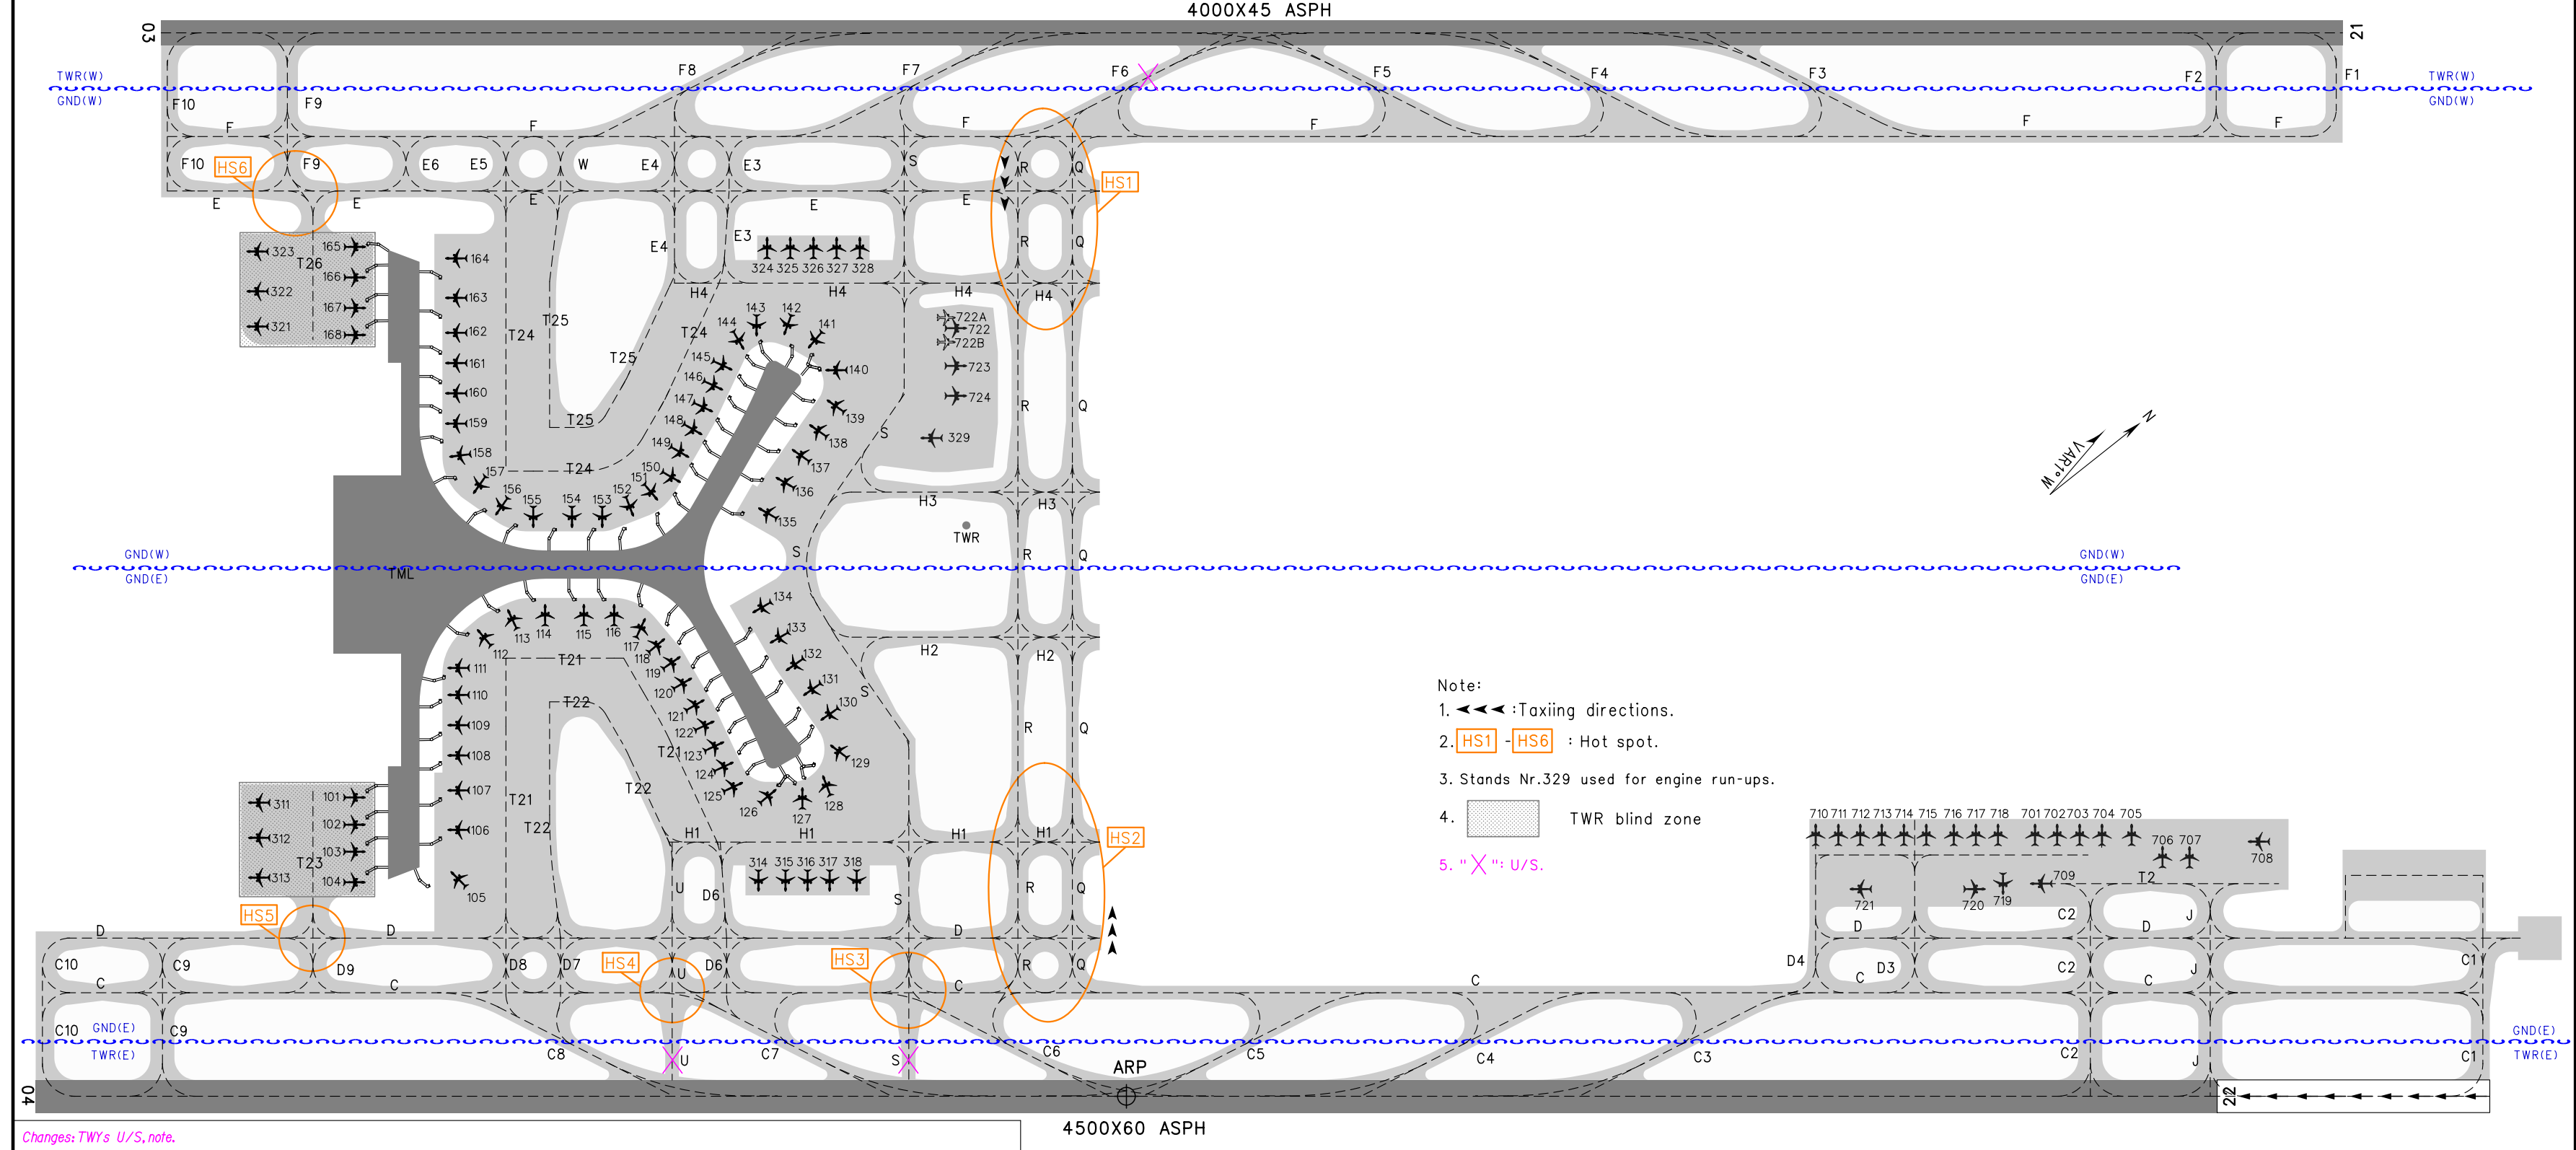

- Note:
- ←←←: Taxiing directions.
 - HS1 - HS6 : Hot spot.
 - Stands Nr.329 used for engine run-ups.
 - TWR blind zone
 - "X": U/S.

Changes: TWY's U/S, note.